



# 2014 Honda Odyssey Universal Mounting Bracket Install Guide


No plastics or parts removal required for installation


**Step 1:** Locate rear steering column bolts (12mm). Remove one at a time and install one long universal bracket per bolt (see photo # 1 – 2 - 3)

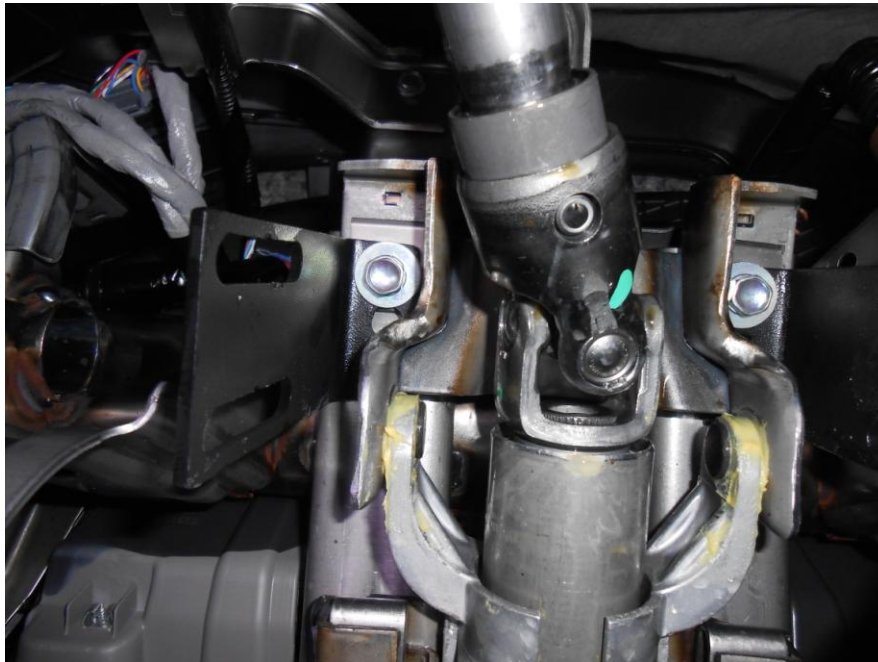

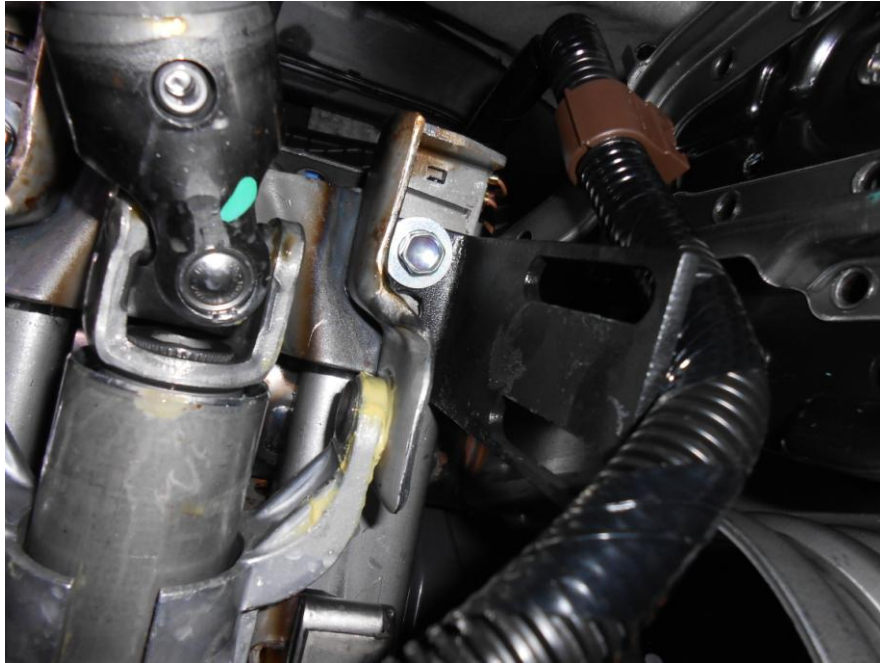

**Step 2:** Build universal cage assembly using the two remaining long universal brackets and using universal camp on block on the bottom to complete cage assembly (see photo #4 - 5)

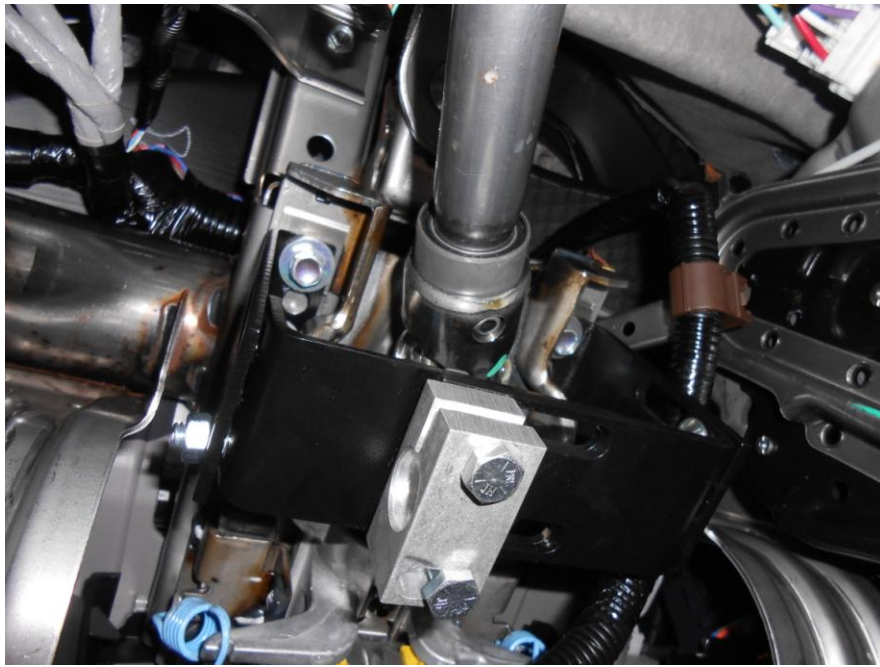

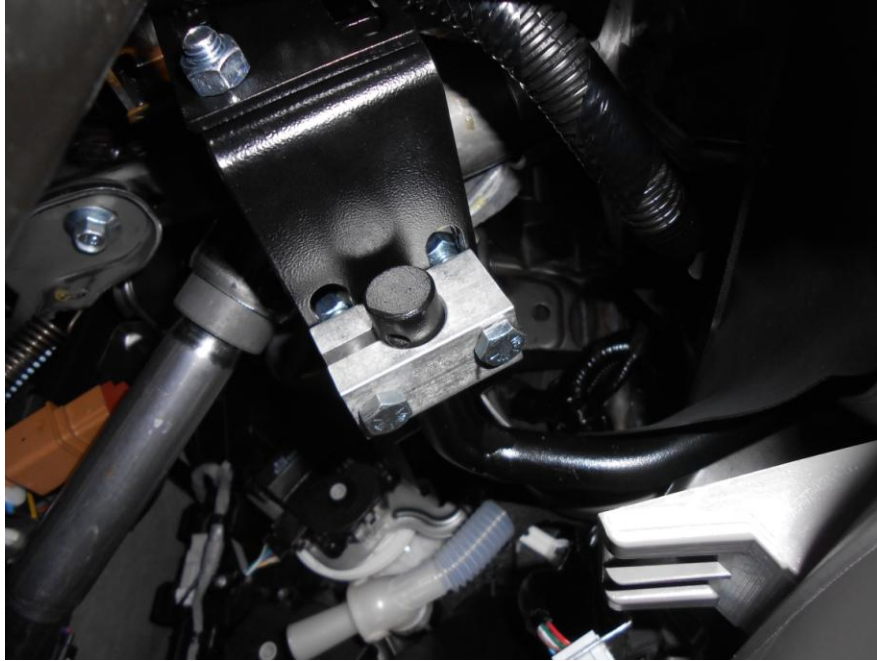

**Step 3:** Next bend support rod specs supplied in photo below and place in the space between steering wheel cover and lower dash plastic

Make first bend to a 30 degree angle





**Make second bend to a 15-20 degree angle**



Install the brake rod, brake tube assembly and gas rod with supplied 7010-17 gas block to gas pedal rod, bend gas tube to desired shape and finalize installation!

If you have any questions please contact Suregrip at 1-800-506-6666