

Instructions for mounting Sure Grip hand controls in 2008-2010 model Dodge Caravans

Step 1: Remove dash panel


Step 2: Locate the OEM steering column studs. There are two sets that are parallel to each other, one set is high and close to the steering wheel, the other set is low and farther towards the firewall. The A524 bracket bolts to the two studs on the passenger side of the steering column. These studs are marked out by the arrows in the picture below.



Step 5: (shown below) Loosen the bolts and slide the bracket onto the OEM studs. The tab that is welded onto the bracket should be farther towards the lower stud, with the edge of the bracket with the tab on it facing towards the right (passenger side).



Step 6: Tighten the bolts back onto the studs and bolt the clamping block to the bracket.

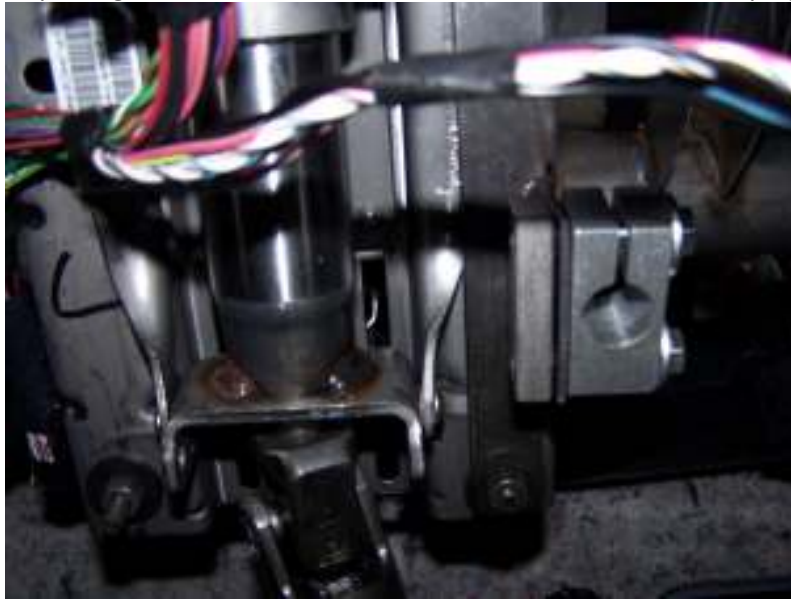

You can now proceed with your installation starting at section 9.4 of your Sure Grip Installation Manual. If you encounter any issues please feel free to contact us at 888-370-5050.