


BRK 590 Impala Bracket



Innovative Driving Solutions

Remove the column cover to access the 13mm nuts located on the column studs circled in red. Completely remove both 13mm nuts.

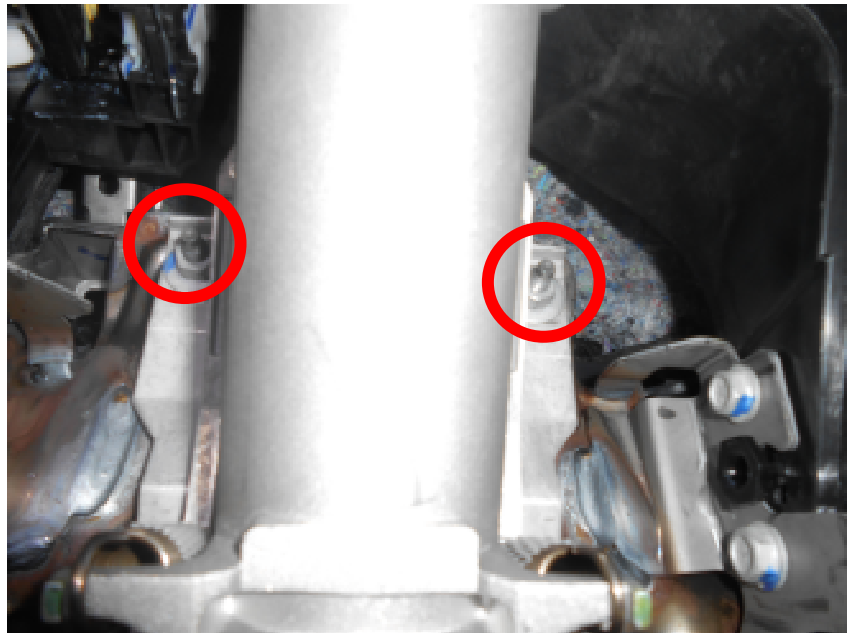

Slide the holes on the arms of the bracket over the studs. When the bracket is in place, reattach the two nuts and tighten them down to OEM standards. Once the bracket is in place you can move on to mounting the support rod .

