


Instructions for mounting Sure Grip hand controls with A560 bracket for 2003+ model Chevy Express/GMC Savanna

Step 1: Remove lower dash panel

Step 2: The bracket mounts to the two bolts that hold the “U shaped” knee bolster to the dash support on the right hand side. Remove the bolts, align the two holes on the bracket with the vacant bolt holes, put the OEM bolts back in place and tighten. When the bracket is in place it should look like this

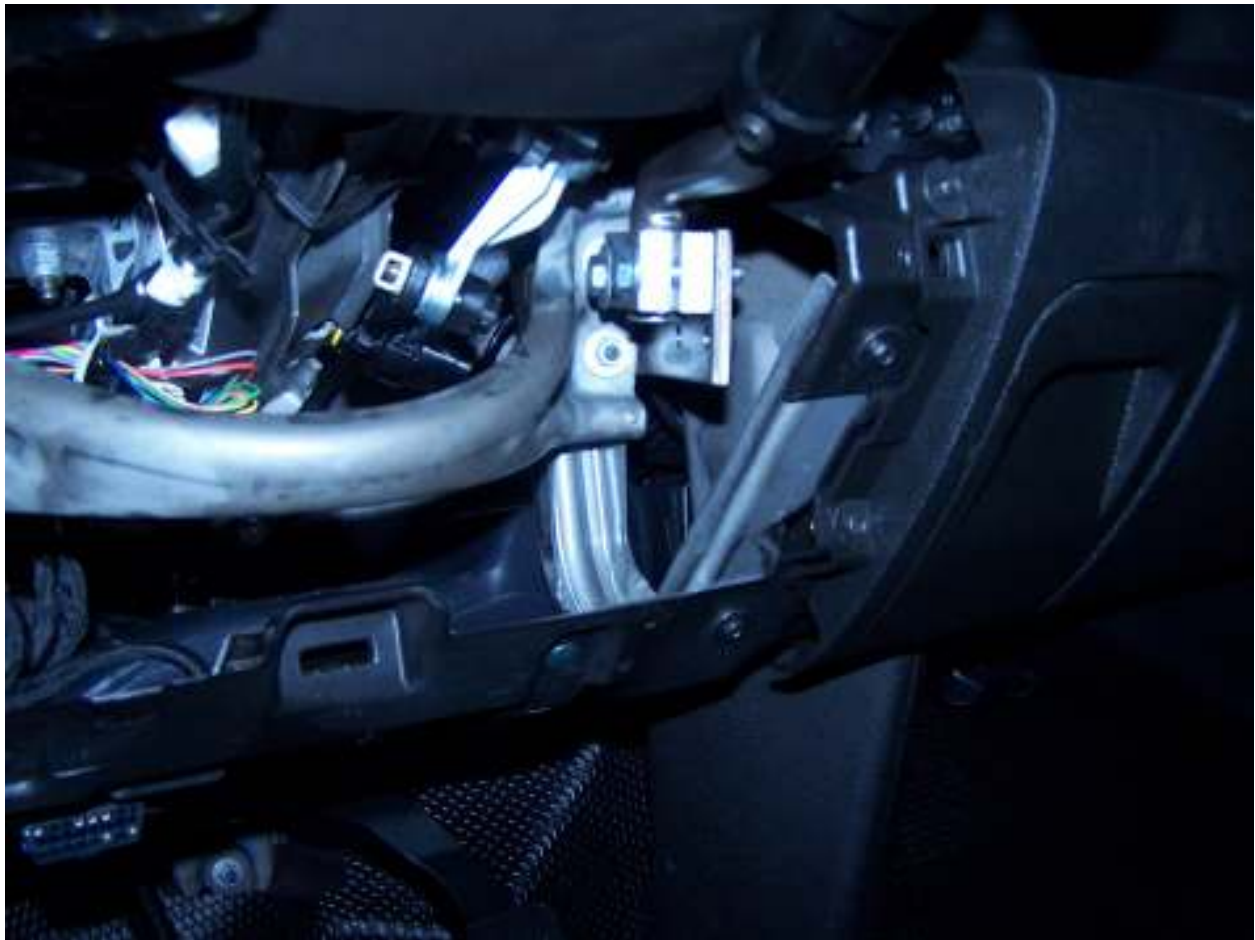

Notice how the support rod needs to be bent in order to exit the dash properly.

Once this is completed, you can continue from section 9.4 in your Sure Grip installation manual. If you encounter any problems please feel free to contact Sure Grip Technical support at 888-370-5050.